


Fischer LP360™ Rugged Flash Drive FAQ

User INFORMATION for Windows 10

When connecting the Fischer LP360™ Rugged Flash Drive 256 GB in Windows 10, an error message may appear:

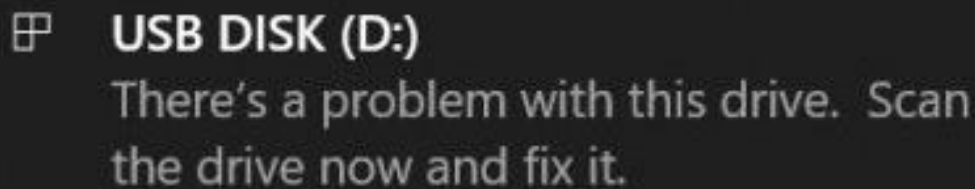

USB DISK (D:)
There's a problem with this drive. Scan the drive now and fix it.

To delete the error message, follow this procedure:

1. Click on the error message
2. Answer the question re: your USB DISK by clicking on *“Scan and fix (recommended)”*:



3. Click on *"Repair drive"*



4. Windows 10 will repair the Flash Drive. Once done, the following message will appear – complete the procedure by clicking on *"Close"*.

