

FISCHER FIBEROPTIC SERIES

ROBUST OPTICAL PERFORMANCE EASY CLEANING

CLEANING INSTRUCTIONS















INTRODUCTION

The Fischer FiberOptic Series push-pull connector solutions are purpose built to withstand the elements of rugged and harsh environments, providing virtually faultless optical performance. This rugged push-pull fiber optic connector, for both indoor and outdoor applications, **can also be available** pre-cabled for maximum performance and time saving.

Fischer Connectors recommends the following three cleaning options for the Fischer FiberOptic Series.

- 1. Rapid cleaning (one click cleaning) FO1, FO2, FO4 and FOH.
- 2. Field cleaning (Tap water cleaning) FO1, FO2 and FO4 only.

CAUTION: This cleaning method is NOT recommended for the FOH, as the electrical contacts should be completely dry before using the connector again.

3. Maintenance cleaning (ultrasonic cleaning)

CAUTION: This cleaning method is recommended for the FO1, FO2 and FO4. However, it is possible for the FOH, but only if the connector is completely dry before using it again because of the electrical contacts.

TABLE OF CONTENTS

| INTRODUCTION | 2 |
|--|---|
| | |
| Rapid cleaning (one click cleaning) | 3 |
| 3 (3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 | |
| Field cleaning (Tap water cleaning) | 4 |
| Total closuring (1 op 1 old closuring) | |
| Maintenance cleaning (ultrasonic cleaning) | 5 |
| mantonance dealing (directine dealing) | 0 |



RAPID CLEANING (one click cleaning) - FO1, FO2, FO4 & FOH



FOR RAPID CLEANING WHEN NO VISIBLE DIRT IS PRESENT ON THE CONNECTOR.

What you need

US conec IBC[™] Brand Cleaner (H125)



Tweezers



Procedure

- Insert IBC[™] Brand Cleaner on male contact (receptacles) and perform one click /cleaning per contact.
- Remove the IBC[™] Brand Cleaner adapter, insert it in the female contacts (plugs) and perform one click / cleaning per contact.
- Always clean both sides of the connector (if you mate a dirty contact with a clean one, you pollute both of them).
- If the cleaning is not efficient enough, remove the sleeve holder, manually unscrew it for FO1 or use tweezers for FO2, FO4 and FOH and repeat the cleaning with the IBC™ Brand cleaner.



Cleaning the electrical contacts is also necessary because dirt at their tip will lead to heat buildup and eventually to contact failure.





FIELD CLEANING (Tap water cleaning) - FO1, FO2, FO4 only



What you need

US conec IBC[™] Brand Cleaner (H125)



Canned air



Tweezers




Running Tap water



Procedure

- Put your connector under running tap water until everything is cleaned.
- Remove the sleeve holder, manually unscrew it for FO1 or use tweezers for FO2, FO4 and FOH and repeat the cleaning with the IBCTM Brand cleaner.
- Repeat the tap water operation if needed.
- Dry the contacts & connector by spraying canned air on it.
- Dry the sleeve holder by spraying canned air on it.
- Insert IBCTM Brand Cleaner on all contacts and perform one click / cleaning per contact.
- Reassemble the sleeve holder.

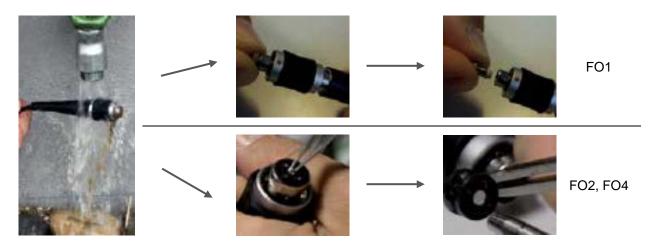



MAINTENANCE CLEANING (ultrasonic cleaning) - FO1, FO2 & FO4



What you need

 Ultrasonic bath Recommended bath composition: Isopropyl alcohol



Canned air








Running Tap water



Procedure

- Put your connector under running tap water until everything is globally cleaned.
- Remove the sleeve holder, manually unscrew it for FO1 or use tweezers for FO2, FO4 and FOH and repeat the cleaning with the IBC™ Brand cleaner.
- Put the connector & the sleeve holder in the ultrasonic bath for ~1 minute.
- Dry the contacts & connector by spraying canned air on it.
- Dry the sleeve holder by spraying canned air on it.
- Reassemble the sleeve holder.
- Slightly grease the plug sealing plan to recover full sealing capabilities*.

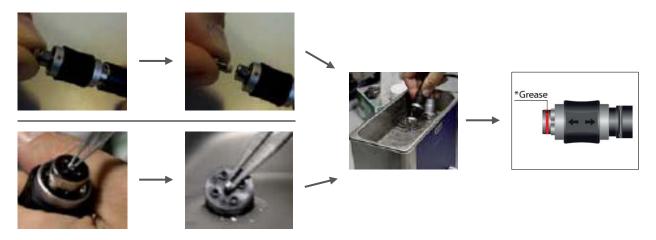





Headquarters
FISCHER CONNECTORS SA
Ch. du Glapin 20
1162 Saint-Prex – Switzerland
Phone +41 21 800 95 95
Free phone +41 800 800 008
mail@fischerconnectors.ch

United States, Canada & South America FISCHER CONNECTORS, Inc. Atlanta, GA Phone +1 678 393 5400 Toll free: 800 551 0121 www.fischerconnectors.com/us mail@fischerconnectors.com

France
FISCHER CONNECTORS Sarl
Paris
Phone +33 1 5578 2578
Appel gratuit : 0 800 590 444
www.fischerconnectors.fr
mail@fischerconnectors.fr

Germany, Austria & Eastern Europe FISCHER CONNECTORS GmbH Zorneding Phone +49 8106 37722 0 Gebührenfrei : 0 800 233 3233 www.fischerconnectors.de mail@fischerconnectors.de

Italy
FISCHER CONNECTORS Srl
Monza
Phone +39 039 734 072
www.fischerconnectors.it
mail@fischerconnectors.it

United Kingdom & Ireland FISCHER CONNECTORS Ltd. Waterlooville, Hampshire Phone +44 23 9245 9600 Toll free : 0 800 432 0301 www.fischerconnectors.co.uk sales@fischerconnectors.co.uk India
FISCHER CONNECTORS
India Pvt. Ltd.
Gurgaon - Haryana
Phone +91 124 4255642 to 45
www.fischerconnectors.com
salesin@fischerconnectors.in

Asia FISCHER CONNECTORS ASIA Ltd. Hong Kong Phone +852 2620 6118 www.fischerconnectors.hk mail@fischerconnectors.hk

Japan FISCHER CONNECTORS K.K. Tokyo Phone +81 70 1056 6637 www.fischerconnectors.jp mail@fischerconnectors.jp



© Fischer Connectors SA – All rights reserved **Document No. 600611 Rev. 2.0** – Changes without prior notice